



TUOTEG™

LIVE YOUR PATH

EBIKE OWNER'S MANUAL

This manual contains important safety information. Please read and keep for future reference.



Motorized bicycles are new to most riders so in the interest of safe cycling make sure you read, understand, and follow the instructions in this manual.

This manual contains important safety, signal words such as **DANGER**, **WARNING**, **CAUTION**, **IMPORTANT**, and **NOTE** or **NOTICE**. **These are important signal words telling you to pay special attention to that text as rider safety is involved.**

▲ This symbol will appear in areas of critical rider safety.

▲ DANGER and WARNING: Pay special attention to these since failure to do so could result in serious injury or death to the rider or others.

CAUTION: If not followed these instructions could result in injury or mechanical failure or damage to the bicycle.

NOTE or NOTICE or IMPORTANT: These specify something that is of special interest. Read and pay close attention as your safety and that of your bicycle are involved.

IMPORTANT: Read the **BEFORE RIDING** section and check that all parts are installed and working as per this manual. If you understand how the bicycle operates, you will get the best performance. When you read this manual, compare the illustrations to the bicycle. Learn the location of all the controls and parts as well as how they work. **KEEP THIS BOOK FOR FUTURE REFERENCE.**

CAUTION Before you ride the bicycle, check the brakes and other parts of the bike. Make sure all parts are assembled correctly, securely tightened and working properly. Take your first ride in a large, open, level area away from traffic. If you have a problem, call the TUOTEG Technical Support Team at 800-538-0029 or email TechSupport@TUOTEG.com.

CONTENTS

PREFACE	4-6
PARTS IDENTIFICATION CHART.....	7
BEFORE RIDING.....	8-13
ASSEMBLING YOUR BIKE	14-30
LCD OPERATING PROCEDURES	31-33
OPERATING PROCEDURES.....	34-36
MAINTENANCE/REPAIR	37-51
TROUBLESHOOTING	52-55
LIMITED WARRANTY	56-58
IMPORTANT INFORMATION.....	59



PREFACE

Congratulations on the purchase of your new bike! With proper assembly and maintenance it will offer you years of enjoyable riding!

IMPORTANT: Carefully read and follow this manual (and any other materials included with this bike) before riding. Please retain this manual for future use. If this bike was purchased for a child, it is the responsibility of the purchaser to verify the bike has been properly assembled, and that the user has been properly trained and instructed in use of the bike.

This manual is provided to assist you and is not intended to be a comprehensive manual covering all aspects of maintaining and repairing your bicycle. The bicycle you have purchased is a complex piece of equipment that must be properly assembled and maintained in order to be ridden safely. **If you have any doubts about the assembly or your ability to properly assemble and maintain the bicycle, you must have it assembled and maintained by a professional bicycle mechanic.**

⚠ WARNING: Electric bikes are fun to ride but can be dangerous to use. The user or consumer assumes all risk of personal injuries, damage, or failure of the bicycle or system and all other losses or damages to themselves and others and to any property arising as a result of using the bicycle.



DO NOT DISASSEMBLE, MODIFY OR REPLACE ELECTRICAL PARTS.

If you need to change any parts, please consult a professional bicycle mechanic or contact customer service for additional help.



NOTE: YOUR INSURANCE POLICIES MAY NOT PROVIDE COVERAGE FOR ACCIDENTS INVOLVING THE USE OF THIS BICYCLE. TO DETERMINE IF COVERAGE IS PROVIDED YOU SHOULD CONTACT YOUR INSURANCE COMPANY OR AGENT.

⚠ DANGER Failure to properly assemble and maintain your bicycle could result in serious injury or death to the rider.

This manual contains important safety, performance and service information. The purpose of this Owner's Manual is to help you use your bike safely in the manner it is intended and allow you to enjoy the benefits it offers for many years to come. **Please read it before you take the first ride on your new bicycle, and keep it for reference.**

If you have any questions or do not understand something, take responsibility for your safety and call the TUOTEG Technical Support Team at 800-538-0029 or email TechSupport@TUOTEG.com.



ALWAYS WEAR A PROPERLY FITTED HELMET WHEN YOU RIDE YOUR BICYCLE. DO NOT RIDE AT NIGHT. AVOID RIDING IN WET CONDITIONS.

PREFACE

RESPONSIBILITY OF THE OWNER!

IMPORTANT: Reading and following the information and instructions in this manual are essential to the ability of the owner or any other persons allowed to use this bicycle in order to ride safely.

1. It is the responsibility of the owner or in the case of a younger rider the parents of the rider to be certain all assembly instructions have been followed, even if the bike has been assembled by the seller or a professional assembly company.
2. Brakes are essential to safety. Be sure they are checked and working properly before each use. Remember that any mechanical system changes condition during use and must be maintained and checked before each use.
3. Rules for bicycle use (bicycle laws) vary from location to location so be certain the rider knows and understands the rules that apply to bicycle usage in all areas where the bicycle will be used. Wearing a helmet, light or reflective clothing, using lights and reflectors are examples of rules which may exist and which make sense as rider safety precautions at all times.
4. Know how to operate the bicycle and all equipment on it before first use and be certain anyone allowed to use the bike knows how to properly and safely use the bike as well.
5. There are many different types of bicycles and often these types are designed for different uses. Make sure you know what type you have and do not exceed its service limitations. Be sure you check and understand the bicycle classifications set in this manual, including size of the unit that is proper for the rider to insure good control during use. Riders who are too small or large may have control problems. Do not overload a unit with a rider that is too heavy or too large, and do not attempt to carry extra passengers, packages or loads on the bicycle. Do not use street bikes for off-road riding.
6. Your electric bike is water-resistant, but must be properly maintained to preserve this condition. Do not submerge the bicycle or any electric components in water. Water entering electric components can cause a short circuit and damage the electric components with possible injury to the rider and others.
7. The battery's performance can be affected by its environment. Generally speaking, battery's discharge performance is better in a higher temperature. Electric power will drop by more than 1/3 when the temperature is below 32°F (0°C). Thus, this ebike's riding distance per charge will become shorter in winter or cold areas. It returns to normal / optimal when the temperature is higher than 68°F (20°C).
8. Do not put any metal objects in charge hole or battery circuit, it may cause a short circuit, start a fire, or cause an explosion with personal injury or property damage.

NOTE: Max weight of rider + luggage + bike = 220 lb/100kg

PREFACE

▲ CAUTION: For your safety you must carefully read this manual and follow its instructions. Your bicycle may come with additional instruction sheets that cover features unique to your bike. Please ensure that you read and become familiar with their contents and retain them with this manual for future reference. Remember bicycles, in most areas, are subject to the same laws, rules, and regulations as motor vehicles.

▲ Always wear a CPSC approved helmet when riding your bike.

▲ Learn and follow local and state traffic use laws.


Any major service or adjustments on your bike not covered in this manual should be carried out by a professional bicycle mechanic. If you wish to make adjustments yourself, this manual contains important tips on how to do it.

▲ CAUTION: Any adjustments you make are entirely at your own risk. Do **NOT** use your bike for freestyle and stunt riding, jumping or competitive events. Even if you are riding a mountain bike, you should know that off-road use or any similar activities can be dangerous, and you assume the risk for personal injury, damages or losses incurred from such use. Do not ride your bike when any part is damaged or not working properly. **You must, for your safety and the safety of other users, consult a professional bicycle mechanic for any questions on repairs or maintenance.**

▲ WARNING: As with all mechanical components, the bicycle is subjected to wear and high stresses. Different materials and components react to wear or stress fatigue in different ways. As your bicycle ages, you should inspect it more frequently to look for deformed, cracked, bent, or loose components. Such conditions may lead to sudden failure. This may possibly cause injuries to the rider. If something is cracked or broken, do not ride until repairs have been made.

NOTE: BEFORE TRANSPORTING THE BIKE AND/OR BATTERY, CALL THE TUOTEG TECHNICAL SUPPORT TEAM AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM.

! ALWAYS WEAR A HELMET-IT COULD SAVE YOUR LIFE! !

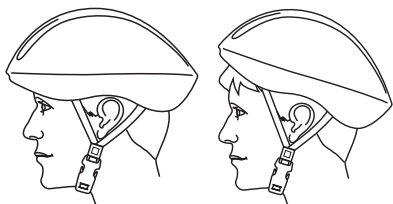

CORRECT

INCORRECT

Forehead Covered Forehead Exposed

A properly fitting, CPSC approved, bicycle helmet should be worn at all times when riding your bicycle.


The correct helmet should:

- be lightweight and comfortable
- have good ventilation
- cover the forehead and fit correctly
- be securely fastened on the rider

PARTS IDENTIFICATION

TUOTEG™ CNQR

1. Handlebar
2. Handlebar Stem
3. Monitor Display
4. Headset
5. Fork
6. Front Brake
7. Pedal
8. Pedal Crank Arm
9. Cadence Sensor
10. Chain
11. Rear Derailleur
12. Motor
13. Wheel
14. Tire
15. Rear Brake
16. Saddle
17. Frame
18. Battery (rack mount)

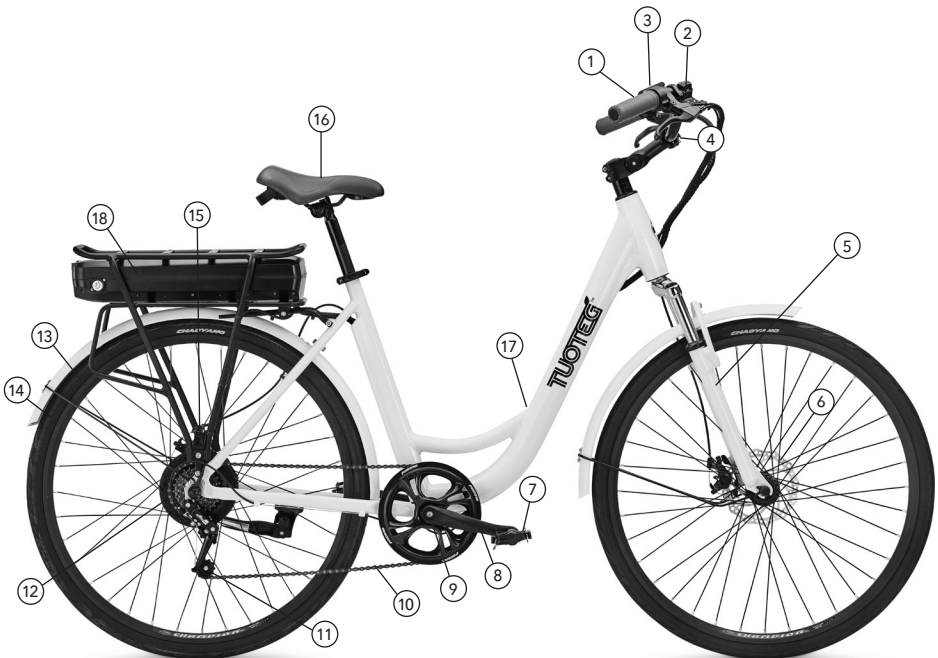

BEFORE RIDING

1. **▲ WARNING - ON- AND OFF-ROAD CONDITIONS:** The condition of the riding surface is very important to your safety. If the surface is wet, or has sand, leaves, small rocks or other loose debris on the surface where you plan to ride, carefully decrease the speed of the bicycle and ride with extra caution. It will take a longer time and more distance to stop. Apply the brakes sooner and with less force. Always apply the rear brake first allowing time and distance for it to take effect. Then follow by cautiously applying the front brake, in order to maintain control of the bicycle. Rapid front brake application first may cause a front pitch over or fall. Learn to use your brakes properly under controlled conditions until you learn proper braking under all road conditions.
2. **NOTICE:** State and federal regulations require a full set of reflectors. Some state and local laws may require that your bike be equipped with a warning device, such as a horn or bell and most states require a light. The manufacturer and many legal authorities **DO NOT** approve or encourage riding at night. Vision is quite limited at dawn, dusk and at night for bike riders, motorists and by-standers. If you must ride at night, take extra precautions, use front and rear lights, wear flashers on your arms, wear light-colored clothing, and plan your route to ride in well-lit areas avoiding heavy traffic areas.
3. **NOTE:** Always wear shoes when riding a bicycle and avoid loose fitting clothes. Wear a cuff band or trouser clip to keep pants or other loose clothing from getting caught in the chain wheel. Long sleeves, long pants, gloves, eye protection, a CPSC approved helmet, elbow and knee pads are recommended.
▲ Helmet use is required by law in many states and is always a good idea for your safety.
4. **CAUTION: WET WEATHER WARNING:** Check your brakes frequently. The ability to stop is critical to your safety. Roads are slippery in wet weather so avoid sharp turns and allow more distance for stopping. Brakes become less efficient when wet. Leaves, loose gravel and other debris on the road can also lengthen stopping distance. If at all possible, do not ride in wet weather. Vision and control are impaired, creating a greater risk of accidents and injury.
5. **CAUTION:** A bicycle rider's best defense against accidents is to be alert to road conditions and traffic in the area. Do not wear anything that restricts your vision or your hearing.
6. When riding, **ALWAYS WEAR A CPSC-APPROVED BIKE HELMET.** It may save your life.
7. Obey all traffic regulations. Most traffic regulations apply to bike riders as well as automobile operators. Observe all state and local traffic regulations, signs and signals. Check with your local police station on bicycle licensing and inspection, and where it is legal to ride your bike.

BEFORE RIDING

8. Keep to the **RIGHT SIDE** of the road. Follow the traffic flow in a straight line close to the curb. Watch out for opening car doors and cars moving in and out of traffic. Use caution at intersections.
9. Never carry passengers. This is dangerous and it makes the bicycle harder to control. Never carry anything that can inhibit your ability to control the bicycle or see the road.
10. When riding in pairs or in larger groups, form a single line along the right side of the road. Set up a sensible distance between riders. Don't follow too closely.
11. Always be alert. Animals or people may dart in front of you. Give pedestrians the right-of-way. Don't ride too close to pedestrians, and don't park your bicycle where it can get in the way of foot/vehicle traffic.
12. Be careful at all intersections. Slow down and look both ways before crossing.
13. Use hand signals. Always let other drivers and pedestrians know what you are going to do. Signal 100 ft before turning unless your hand is needed to control the bike.
14. **WARNING: NIGHT TIME OPERATION:** We do **NOT** recommend riding your bike at night. If you have an emergency that requires you to ride at night you must have proper lights and reflectors. **NEVER** ride at night without a helmet, taillight, a white front reflector, a red rear reflector, pedal reflectors and white wheel reflectors. You must be able to clearly see the surface where you are riding and be seen by others.
15. Never hitch rides. Never hold onto moving vehicles while riding. Never stunt ride or jump on your bike.
16. **ON- AND OFF-ROAD OPERATION:** Avoid the following road hazards: drain grates, pot holes, ruts, soft road edges, gravel, leaves (especially when they are wet), uneven pavement, railroad crossings, manhole covers, curbs, speed bumps, puddles, and debris as all have an effect on your riding and may result in loss of control. Adjust your speed and the way you use your brakes if you must ride in such areas.
17. If any components becomes loose while riding, **STOP IMMEDIATELY** and tighten, or bring to a mechanic for repair.

BEFORE RIDING

Your new bicycle was assembled and tuned in the factory and then partially disassembled for shipping. The following instructions will enable you to prepare your bicycle for years of enjoyable cycling. For more details on inspection, lubrication, maintenance and adjustment of any area please refer to the relevant sections in this manual. **If you have questions about your ability to properly assemble this bicycle, please consult a professional bicycle mechanic before riding.**



TO AVOID INJURY, THIS PRODUCT MUST BE PROPERLY ASSEMBLED BEFORE USE. WE STRONGLY RECOMMEND THAT YOU REVIEW THE COMPLETE ASSEMBLY GUIDE AND PERFORM CHECKS SPECIFIED IN THE OWNER’S MANUAL BEFORE RIDING.

Tools required for assembly:

- 13 & 15mm open (combination) wrenches
- 4, 5, 6mm hex wrenches
- Torque wrench with 4, 5, 6mm hex bits and 13 & 15mm sockets
- Bicycle hand pump and tire pressure gauge
- Bicycle-specific grease
- Phillips & standard screwdrivers
- Cable cutters

RECORD SERIAL NUMBER

Each bicycle has a serial number stamped into the head tube of the frame (See Illustration). Record this number HERE to keep for future reference. This number can be helpful to reclaim your bike if ever lost or stolen. THIS INFORMATION IS ONLY AVAILABLE ON THE BIKE ITSELF. There is no record of your serial number at the store purchased or with our company. It is your responsibility to record this information.

Serial Number: _____



BEFORE RIDING

PRE-RIDE SAFETY CHECKLIST:

Just a minute spent before each ride can significantly improve your safety and the enjoyment of your ride. So, **EACH TIME** before you ride make a habit of performing the following safety checks:


- Stand in front of the bicycle facing rearward and hold the front wheel securely between your legs. Try to twist the handlebar and verify that they do not move. Then pull the handlebars up, trying to lift the bike. There should be no movement.
- Try to push the front wheel from side to side and confirm that it feels tight and will not wobble. Lift the front wheel up by the handlebars and strike the wheel downward with the heel of your hand to confirm that it is securely attached to the wheel. Spin the front wheel and confirm that it does not wobble or contact the fork or brake pads.
- Try to lift/push down on and twist the seat to confirm it is tight.
- Look at the connection of the pedals to the crank arm. You should not see pedal screw threads and the pedal should feel firm and be parallel to the ground.
- Apply your brake(s) and make sure they feel firm to the touch, and then spin the wheel(s). Apply the brakes. The brakes should stop the wheel(s).
- Check to be sure that the fenders and accessories (if equipped) are firmly attached and will not contact any moving parts. Make sure all reflectors are in position and not broken.

Now, put on your **BICYCLE SAFETY HELMET** and enjoy your ride. Your safety is well worth ***just a minute***. Also, be sure to read and follow the warnings and instructions in this manual.

BEFORE RIDING

CORRECT FRAME SIZING:

When selecting a new bicycle, the correct choice of frame size is a very important safety consideration. The ideal clearance will vary between types of bicycles and rider preference. This makes straddling the frame when off the saddle easier and safer in situations such as sudden traffic stops. Women can use a man's bicycle to determine the correct size women's model.

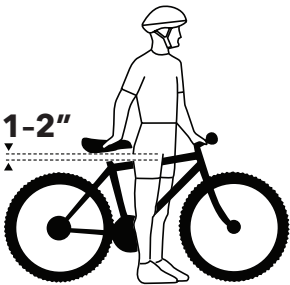


- ⚠ THERE SHOULD BE A CLEARANCE OF NO LESS THAN 1-2 INCHES BETWEEN THE GROIN AREA OF THE INTENDED RIDER AND THE TOP TUBE OF THE BICYCLE, WHILE THE RIDER STRADDLES THE BICYCLE WITH BOTH FEET FLAT ON THE GROUND.**
- ⚠ THE SEAT POST "MINIMUM INSERTION" / "MAXIMUM HEIGHT" MARK SHOULD NOT BE VISIBLE WHEN THE SEAT POST IS INSERTED INTO THE SEAT MAST OF THE BIKE. DO NOT RAISE THE SEAT POST BEYOND THIS MARK. THE SEAT POST OR FRAME MAY BREAK CAUSING YOU TO LOSE CONTROL AND FALL. ALWAYS CHECK TO MAKE SURE THE SEAT POST ADJUSTING MECHANISM IS TIGHTENED SECURELY BEFORE RIDING.**

BEFORE RIDING

RIDING POSITION:

SADDLE HEIGHT

In order to obtain the most comfortable riding position and offer the best possible pedaling, correct saddle height should not allow leg strain from over-extension, and the hips should not rock from side to side when pedaling. While sitting on the bicycle with one pedal at it's lowest point, place the ball of your foot on the pedal. The correct saddle height will allow the knee to be slightly bent in this position.

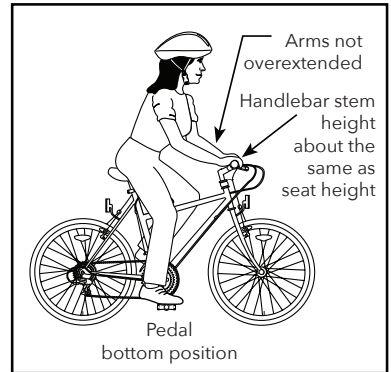

REACH

To obtain maximum comfort, the rider should not over extend his or her reach when riding. There should be a slight bend in the rider's elbows. Refer to the section regarding seat and seat posts to learn how to adjust the seat post height.



ASSEMBLING YOUR BIKE

PREPARATION

It is important that you read this owner's manual before you start to assemble your bicycle. **WE RECOMMEND THAT YOU CONSULT A PROFESSIONAL BICYCLE MECHANIC IF YOU HAVE DOUBTS OR CONCERNS AS TO YOUR ABILITY TO PROPERLY ASSEMBLE, REPAIR, OR MAINTAIN YOUR BICYCLE.** Remove all parts from the shipping carton. Check to make sure no parts are loose on the bottom of the carton. Carefully remove the front wheel which is attached to the side of the bicycle for shipping. Carefully remove all other packing material from the bicycle. This includes zip ties, axle caps and material protecting the frame.

FRONT WHEEL

1. Remove the nuts, washers and wheel retainers from the front wheel.
2. Slide the wheel onto the open ends of the fork. Slip an axle retainer onto each end of the axle, and hook the retainers into the holes in the fork end. Loosely install the washer onto each end of the axle (serrated end toward the retainer), then install the hex nut. (Note: there may be a washer head nut in place of the washer and hex nut).
3. Center the wheel in the fork and tighten the axle nuts securely, alternating from one side to the other to center the wheel.
4. Spin the wheel to make sure that it is centered in the fork and does not wobble. If the wheel is not centered, loosen the nuts and try again.

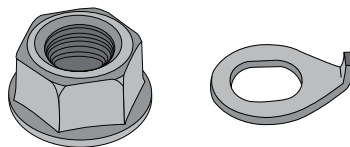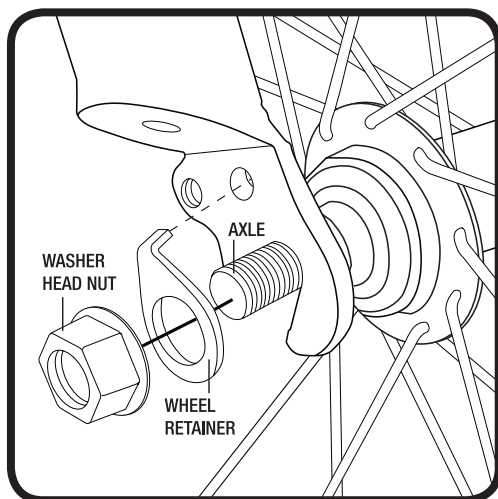

Torque requirement: 16-20 ft-lb.

ASSEMBLING YOUR BIKE

KICKSTAND INSTALLATION

If your bike is equipped with a kickstand, please follow the instructions below.

1. Place the bicycle in an upright position.
2. Remove the two bolts from the kickstand.
3. From the left side of the bicycle (opposite side from chainring), line the kickstand up with the mounting holes on the chainstay. Thread in the bolts.
4. Tighten the kickstand bolts using the 5mm hex wrench. Torque 8-9 ft-lb.


ASSEMBLING YOUR BIKE

PEDAL INSTALLATION

1. Apply a small amount of grease to the threads of each pedal. Look for the letter "L" or "R" on the side or end of each pedal spindle (picture). Turning the spindle clockwise by hand (Picture), thread the pedal marked "R" into the crank arm on the right (drive) side of the bicycle. Make sure that you are not "cross-threading", which can strip the threads in the crank arm. If the threads do not turn easily, don't force them. Back the spindle out and start over. Once the pedal is threaded into the crank arm, tighten the spindle securely to the crank arm with a 15mm open end or an adjustable wrench.
2. Turning the spindle counterclockwise by hand, thread the pedal marked "L" into the crank arm on the left side of the bike. Make sure that you are not "cross-threading", which can strip the threads in the crank arm. If the threads do not turn easily, don't force them. Back the spindle out and start over. Once the pedal is threaded into the crank arm, tighten the spindle securely to the crank arm with a 15mm pedal wrench or open ended wrench.

⚠ WARNING! IMPROPERLY INSTALLED AND TIGHTENED PEDALS CAN WORK LOOSE, DAMAGING THE BICYCLE AND CAUSING POSSIBLE SERIOUS INJURY OR DEATH TO THE RIDER.


Torque Requirement: 20-24 Nm (15-18 ft-lb).

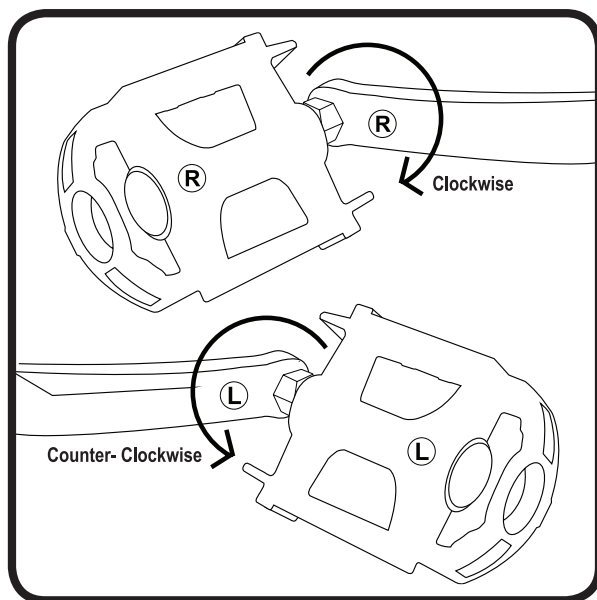

ASSEMBLING YOUR BIKE

HANDLEBAR INSTALLATION & ALIGNMENT

1. Loosen the stem clamp faceplate bolts and remove the faceplate.
2. Place the handlebar on the stem and loosely tighten the faceplate bolts just enough to hold the bars in place.
3. Make certain the handlebar is centered left-to-right in the stem and is rotated to the desired position.
4. Tighten the stem faceplate bolts gradually and evenly by using an "X" pattern. The gap between the faceplate and the stem body should be even on top and bottom. Recommended torque for these bolts is 5Nm (44 in-lb) Check handlebar tightness by trying to rotate the bars forward and back. If they turn, the faceplate is too loose. Realign and tighten further.

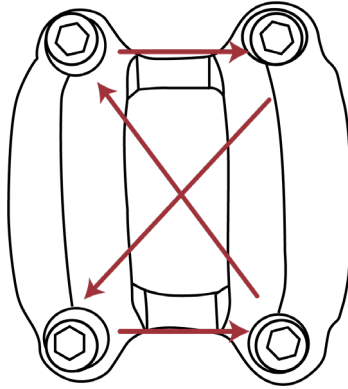


Faceplate Bolt Tightening Pattern

5. Verify that the stem faces forward directly in line with the front wheel. If not, use a 5mm hex wrench to loosen, realign and re-tighten the two Allen screws on the stem steerer tube clamp to a torque of 8-9 Nm (70-80 in-lb).
6. Check steering by straddling the front wheel and trying to turn the handlebar. If you can turn the handlebar without turning the front wheel. The stem is too loose. Realign and tighten further.
7. FOR BIKES WITH ADJUSTABLE STEMS: the adjustment screw is located on the left (non-drive-side) of the stem. Use a 6mm hex wrench to loosen the bolt but DO NOT remove—loosen it only enough to allow angle adjustment. Adjust to the desired angle and tighten bolt securely. Check the stem for tightness before riding.


ASSEMBLING YOUR BIKE

THREADLESS STEM ASSEMBLY (IF APPLICABLE)

⚠ WARNING! ALWAYS TIGHTEN FASTENERS TO THE CORRECT TORQUE. BOLTS THAT ARE TOO TIGHT CAN DEFORM. BOLTS THAT ARE TOO LOOSE CAN MOVE AND FATIGUE. EITHER MISTAKE CAN LEAD TO LOSS OF CONTROL, SERIOUS INJURY OR DEATH. IF YOU DO NOT FEEL COMFORTABLE WITH YOUR SKILLS IN ASSEMBLING OR ADJUSTING THE BIKE, PLEASE TAKE IT TO A PROFESSIONAL BIKE MECHANIC.

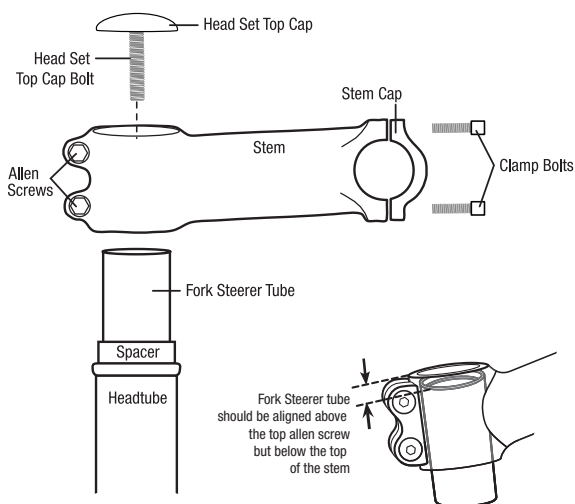

1. Make sure the front fork is facing forward (see illustration).
2. Insert the stem onto the fork steerer tube. Align the steerer tube so that it sits ABOVE the top hex screw, but BELOW the top of the stem.
3. Tighten the 5mm head set top cap bolt to a torque of 15 ft-lb. Do Not Overtighten!
4. Face the handlebar stem forward directly in line with the front wheel. Tighten the two 5mm Allen screws on the handlebar stem to a torque of 8-9 Nm (70-80 in-lb).
5. FOR BIKES WITH ADJUSTABLE STEMS: The stem angle can be adjusted from 90 to 145 degree angle. The adjustment screw is located on the left (non-drive-side) of the stem.

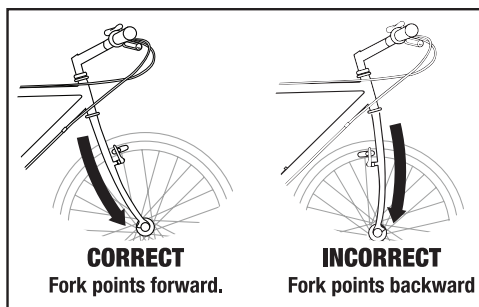

Use a 6mm hex wrench to loosen the bolt but **DO NOT** remove the bolt. Loosen it only enough to allow angle adjustment.) Adjust to the desired angle and tighten bolt securely. Check the stem for tightness before riding.

ASSEMBLING YOUR BIKE

SEAT & SEAT POST ASSEMBLY

1. Loosen the seat clamp nuts.
2. Insert the top portion of the seat post into the seat clamp. Be sure the seat post is completely inserted into the seat clamp and butted tightly against the underside of the seat.
3. Using the 13mm wrench, tighten seat clamp nuts securely.
4. Lightly grease the inside of the seat tube. Insert the seat post (with seat attached) into the bike frame. Be sure that the seat post is inserted past the minimum insertion line.
5. Tighten the seat post binder bolt securely at the desired height.
6. Adjust the angle of the seat so that the top of the seat is parallel to the ground or comfortable to the rider.
7. Retighten the seat clamp nuts securely (torque requirement 15–20 ft-lb). Check for tightness by attempting to twist the seat along with rocking it up and down. If the seat is loose, be sure to tighten the clamp nuts and binder bolt securely.

▲ THE SEAT POST “MINIMUM INSERTION” / “MAXIMUM HEIGHT” MARK SHOULD NOT BE VISIBLE WHEN THE SEAT POST IS INSERTED INTO THE SEAT MAST OF THE BIKE. DO NOT RAISE THE SEAT POST BEYOND THIS MARK. THE SEAT POST OR FRAME MAY BREAK CAUSING YOU TO LOSE CONTROL AND FALL.

ALWAYS CHECK TO MAKE SURE SEAT POST ADJUSTING MECHANISM IS TIGHTENED SECURELY BEFORE RIDING. RIDING WITH AN IMPROPERLY TIGHTENED SEAT POST CAN ALLOW THE SEAT TO TURN OR MOVE AND CAUSE THE RIDER TO LOSE CONTROL

SADDLE HEIGHT

In order to obtain the most comfortable riding position and relation to the rider's leg length. The correct saddle height should not allow leg strain from over-extension, and the hips should not rock from side to side when pedaling. While sitting on the bicycle with one pedal at it's lowest point, place the ball of your foot on the pedal. The correct saddle height will allow the knee to be slightly bent in this position. To obtain maximum comfort, the rider should not over extend his or her reach when riding. There should be a slight bend in the rider's elbows.




ASSEMBLING YOUR BIKE

DISC BRAKES

We suggest that if your bike comes equipped with a disc brake that you consult a professional bicycle mechanic for any adjustments or repair needed for this brake.

SAFETY PRECAUTIONS

1. Adjust the inner cable so that the protruding length is less than 20mm. If the protruding length is any longer, the end of the cable may become stuck in the rotor, which could cause the wheel to lock and the bicycle could fall forward causing injuries.
2. The calipers and rotor will become hot when the brakes are operated, so do not touch them while riding or immediately after dismounting from the bicycle, you may get burned. Check that the brake components have cooled down before attempting to adjust the brakes.
3. Always make sure that the front and rear brakes are working correctly before you ride the bicycle.
4. Before riding the bicycle, check that the pad thicknesses are 0.5mm or more.
5. If noise occurs when the brakes are operated, it may indicate that the brake pads have worn down to their usage limit. After checking that the brake system has cooled down sufficiently, check the brake pad thickness. Replace the brake pads if the wear indicators are visible.
6. Be careful not to allow any oil or grease to get onto the rotor and brake pads, otherwise the brakes may not work correctly.
7. Check the brake cable for rust and fraying, and replace the cable immediately if such problems are found. If this is not done, the brakes may not work correctly.
8. The required braking distance will be longer during wet weather. Reduce your speed and apply the brakes early and gently.
9. If the road surface is wet, the tires will skid more easily. If the tires skid, you may lose control of the bicycle. To avoid this, reduce your speed and apply the brakes gently.

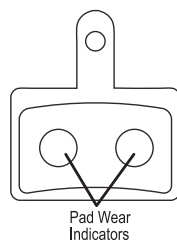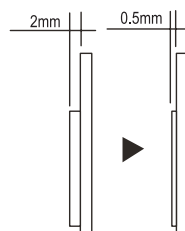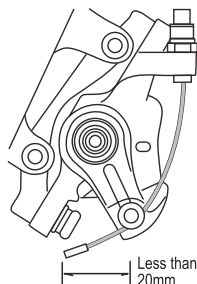


ASSEMBLING YOUR BIKE

DISC BRAKES *continued*


10. It is important to completely understand the operation of your bicycle's brake system. Improper use of your brake system may result in loss of control or an accident, which could lead to severe injury. Because each bicycle may handle differently be sure to learn proper braking technique (including brake lever pressure and bicycle control characteristics) and operation of your bicycle. This can be done by consulting a professional bicycle mechanic and referring to the disk brake instruction sheet included with your bike. This can also be done by practicing your braking technique in a safe area before hitting the trails.

CAUTION: Disc brakes have a burn-in period, and the braking force will gradually increase as the burn-in period progresses. Make sure that you are aware of any such increases in braking force when using the brakes during the burn-in period. The same thing will happen when the brake pads or rotor are replaced.

If the brake cable is not connected at the brake lever, line up brake barrel slot with brake lever slot before installing the cable. Slide the head of the brake cable into the brake lever per the diagram. Thread the cable through the slot in the brake lever so the cable end rests squarely in the adjusting barrel. Turn the adjusting barrel to close.

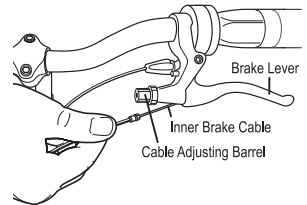


If the brake cable is disconnected at the disc caliper, thread the brake wire through the adjustment barrel, loosen the cable anchor bolt until you can see a hole through the anchor bolt for the cable wire to attach. Thread the cable wire through the cable anchor and tighten by hand.

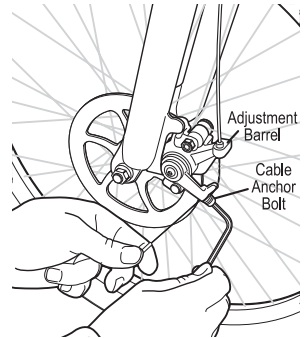

Centering brake - First determine if the wheel is centered. Look at the space between the tire and the frame on either side. If it is not even, loosen the wheel axle nuts and center the wheel, then proceed to center the brake.

If the brake is not centered, look at the disc brake caliper for centering adjustment screws at the center of the brake pad on either side. Looking down into the brake where the brake pads contact the disc rotor, determine which side needs to move away or towards the disc. Turn the centering adjustment screws so that there is about 1/32 of an inch of clearance on either side of the disc rotor. Spin the front wheel and listen for any rubbing noise or excess friction. Repeat the steps until the brake is centered.

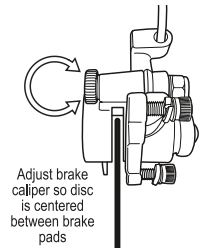

ASSEMBLING YOUR BIKE

DISC BRAKES *continued*

Brake is adjusted correctly when the brake pads do not drag on the rotor when the brake is open and when applied, the brake pads contact the rim before the brake lever reaches about 1/3 of the way to the handlebar.

After adjusting the brake, reinspect the brake pads, centering, and brake lever travel. If the brake pads are no longer square to the rim, repeat brake pad adjustments. Be sure that the brake pads return to a centered position by spinning the wheel and listening for the brake pad rubbing the rotor on either side. Readjust as needed. Check that the brake cable tension allows the brake lever about 1/3 of the travel before the brake pads contact the rotor. If the cable has stretched or slipped, readjust brake cable tension by loosening the cable anchor bolt and pulling more cable through the anchor or use the brake adjustment barrel for fine tuning the brake cable tension.

▲ WARNING! DISC GETS HOT! SEVERE INJURY COULD RESULT FROM CONTACT WITH THE HOT DISC. ALLOW DISC TO COOL COMPLETELY BEFORE TOUCHING.

ASSEMBLING YOUR BIKE

TIRES AND TUBES

After assembling your bike, it will be necessary to inflate the tires. Check the side wall of the tire for the correct tire pressure (PSI) and inflate tires accordingly with a MANUAL BICYCLE PUMP. **Improper inflation is the biggest cause of tire failure. Due to the slightly porous nature of bicycle inner tubes, it is normal for your bike tires to lose pressure over time. For this reason it is critically important to maintain the proper tire inflation on your bike.**

1. Your bicycle has been equipped with tires which the bike's manufacturer felt were the best balance of performance and value for the use for which the bike was intended. The tire size and pressure rating are marked on the sidewall of the tire. CAUTION: Pencil type automotive tire gauges and gas station air hose pressure settings can be inaccurate and should not be relied upon for consistent, accurate pressure readings. Instead, use a high quality dial gauge.

⚠ WARNING: NEVER INFLATE A TIRE BEYOND THE MAXIMUM PRESSURE MARKED ON THE TIRE'S SIDEWALL. EXCEEDING THE RECOMMENDED MAXIMUM PRESSURE MAY BLOW THE TIRE OFF THE RIM, WHICH COULD CAUSE DAMAGE TO THE BIKE AND INJURY TO THE RIDER AND OTHERS. THE BEST WAY TO INFLATE A BICYCLE TIRE TO THE CORRECT PRESSURE IS WITH A BICYCLE PUMP. NEVER USE A SERVICE STATION AIR HOSE TO INFLATE A BICYCLE TIRE. IT IS DESIGNED FOR LARGER TIRES AND IT CAN EXCEED THE RECOMMENDED MAXIMUM PRESSURE AND IT MAY BLOW THE TIRE OFF THE RIM.


Tire pressure is given either as maximum pressure or as a pressure range. How a tire performs under different terrain or weather conditions depends largely on tire pressure. Inflating the tire to near its maximum recommended pressure gives the lowest rolling resistance; but also produces the harshest ride. High pressures work best on smooth, dry pavement. Very low pressures, at the bottom of the recommended pressure range, give the best performance on smooth, slick terrain such as hard-packed clay, and on deep, loose surfaces such as deep, dry sand. Tire pressure that is too low for your weight and the riding conditions can cause a puncture of the tube by allowing the tire to deform sufficiently to pinch the inner tube between the rim and the riding surface.

Some special high-performance tires have unidirectional treads: their tread pattern is designed to work better in one direction than in the other. The sidewall marking of a unidirectional tire will have an arrow showing the correct rotation direction. If your bike has unidirectional tires, be sure that they are mounted to rotate in the correct direction.

ASSEMBLING YOUR BIKE

TIRES AND TUBES *continued*

2. The tire valve allows air to enter the tire's inner tube under pressure, but doesn't let it back out unless you want it to. There are primarily two kinds of bicycle tube valves: the Schraeder valve and the Presta valve. The bicycle pump you use must have the fitting appropriate to the valve stems on your bicycle. The Schraeder is like the valve on a car tire. This is the type of valve stem you should have on your bike. To inflate a Schraeder valve tube, remove the valve cap and push the air hose or pump fitting onto the end of the valve stem. To let air out of a Schraeder valve, depress the pin in the end of the valve stem with the end of a key or other appropriate object.

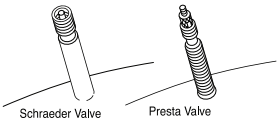

ASSEMBLING YOUR BIKE

REFLECTORS

Your bike is supplied with one front reflector (white), one rear reflector (red), two wheel reflectors (white) and four pedal reflectors (orange). These are an important safety and legal requirement, and should remain securely fitted and in good condition at all times. Periodically, inspect all reflectors, brackets and mounting hardware for signs of wear or damage. Replace immediately if damage is found. Some bicycles will require you to install your reflectors onto your bicycle. Please refer to the following section for instructions on all types of bicycle reflectors.


⚠ WARNING! REFLECTORS ARE IMPORTANT SAFETY DEVICES WHICH ARE DESIGNED AS AN INTEGRAL PART OF YOUR BICYCLE. FEDERAL REGULATIONS REQUIRE EVERY BICYCLE TO BE EQUIPPED WITH FRONT, REAR, WHEEL, AND PEDAL REFLECTORS. THESE REFLECTORS ARE DESIGNED TO PICK UP AND REFLECT STREET LIGHTS AND CAR LIGHTS IN A WAY THAT HELPS YOU TO BE SEEN AND RECOGNIZED AS A MOVING BICYCLIST. CHECK REFLECTORS AND THEIR MOUNTING BRACKETS REGULARLY TO MAKE SURE THEY ARE CLEAN, STRAIGHT, UNBROKEN AND SECURELY MOUNTED. REPLACE DAMAGED REFLECTORS AND STRAIGHTEN OR TIGHTEN ANY THAT ARE BENT OR LOOSE.

ASSEMBLING YOUR BIKE

FORK MOUNT REFLECTORS

First insert one washer onto the hex bolt and insert hex bolt through the reflector bracket and then through the fork. Next, insert a second washer onto the bolt and thread a hex nut onto the bolt behind the fork. Tighten bolts until snug, making sure the reflector is in an upright position.

CAUTION: Be sure the reflector is vertical to the ground. If the reflector is aimed up or down, oncoming headlights may not reflect properly in the reflector.

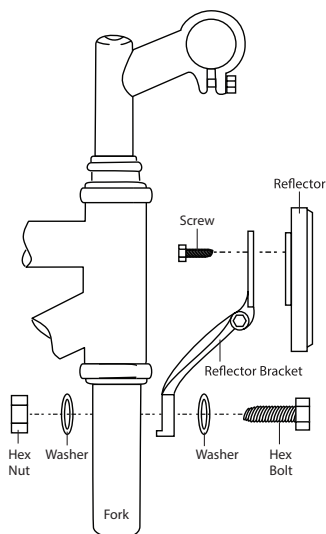


ASSEMBLING YOUR BIKE

REAR REFLECTOR MOUNT ON SEAT POST

First attach the reflector to the bracket with the reflector screw. Next, remove the clamp screw and open the clamping reflector bracket. Place clamping reflector bracket around the seat post. If the clamp is too loose, insert the shim inside the clamp. Tighten the clamp screw to hold the reflector assembly in place. Finally adjust the reflector assembly in place and ensure that it is upright and facing away from the bike.

CAUTION: Be sure the reflector is vertical to the ground. If the reflector is aimed up or down, oncoming headlights may not reflect properly in the reflector.

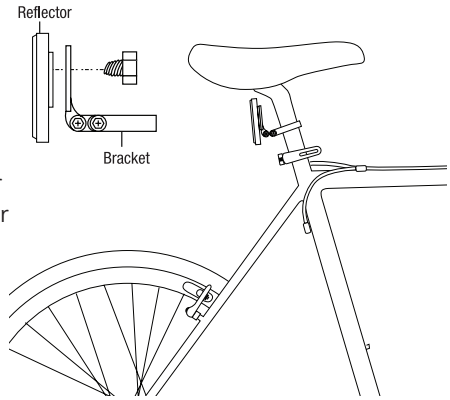

ASSEMBLING YOUR BIKE

SHIFTING GEARS

If your bike is a multi-speed bike, please read the information below to familiarize yourself with the basics of shifting gears.

Your multi-speed bicycle will have a derailleur drivetrain (see 1. below), an internal gear hub drivetrain (see 2. below) or, in some special cases, a combination of the two.

1. How a Derailleur Drivetrain Works

If your bicycle has a derailleur drivetrain, the gear-changing mechanism will have:

- a rear cassette or freewheel sprocket cluster
- a rear derailleur
- usually a front derailleur
- one or two shifters
- one, two or three front sprockets called chainrings
- a chain

A. A Brief Note About Shifting Gears

There are several different types and styles of shifting controls: levers, twist grips, triggers, combination shift/brake controls, pushbuttons, and so on. If you are not comfortable shifting gears, ask your local bike mechanic to explain the type of shifting controls that are on your bike, and to show you how they work. The vocabulary of shifting can be pretty confusing. A downshift is a shift to a “lower” or “slower” gear, one which is easier to pedal. An upshift is a shift to a “higher” or “faster”, harder to pedal gear. What’s confusing is that what’s happening at the front derailleur is the opposite of what’s happening at the rear derailleur (for details, read the instructions on Shifting the Rear Derailleur and Shifting the Front Derailleur below). For example, you can select a gear which will make pedaling easier on a hill (make a downshift) in one of two ways: shift the chain down the gear “steps” to a smaller gear at the front, or up the gear “steps” to a larger gear at the rear. So, at the rear gear cluster, what is called a downshift looks like an upshift. The way to keep things straight is to remember that shifting the chain in towards the centerline of the bike is for accelerating and climbing and is called a downshift. Moving the chain out or away from the centerline of the bike is for speed and is called an upshift. Whether upshifting or downshifting, the bicycle derailleur system design requires that the drive chain be moving forward and be under at least some tension. A derailleur will shift only if you are pedaling forward.

CAUTION: Never move the shifter while pedaling backward, nor pedal backward immediately after having moved the shifter. This could jam the chain and cause damage to the bicycle.

ASSEMBLING YOUR BIKE

B. Shifting the Rear Derailleur

The rear derailleur is controlled by the right shifter. The function of the rear derailleur is to move the drive chain from one gear sprocket to another. The smaller sprockets on the gear cluster produce higher gear ratios. Pedaling in the higher gears requires greater pedaling effort, but takes you a greater distance with each revolution of the pedal cranks. The larger sprockets produce lower gear ratios. Using them requires less pedaling effort, but takes you a shorter distance with each pedal crank revolution. Moving the chain from a smaller sprocket of the gear cluster to a larger sprocket results in a downshift. Moving the chain from a larger sprocket to a smaller sprocket results in an upshift. In order for the derailleur to move the chain from one sprocket to another, the rider must be pedaling forward.

C. Shifting the Front Derailleur

The front derailleur, which is controlled by the left shifter, shifts the chain between the larger and smaller chainrings. Shifting the chain onto a smaller chainring makes pedaling easier (a downshift). Shifting to a larger chainring makes pedaling harder (an upshift).

ASSEMBLING YOUR BIKE

D. Which Gear Should I Be In?


The combination of largest rear and smallest front gears is for the steepest hills; the smallest rear and largest front combination is for the greatest speed. It is not necessary to shift gears in sequence. Instead, find the “starting gear” which is right for your level of ability (a gear which is hard enough for quick acceleration but easy enough to let you start from a stop without wobbling) and experiment with upshifting and downshifting to get a feel for the different gear combinations. At first, practice shifting where there are no obstacles, hazards or other traffic, until you’ve built up your confidence. Learn to anticipate the need to shift, and shift to a lower gear before the hill gets too steep. If you have difficulties with shifting, the problem could be mechanical adjustment. See your local bike mechanic for help.

WARNING! NEVER SHIFT A DERAILLEUR TO THE LARGEST OR THE SMALLEST SPROCKET IF THE DERAILLEUR IS NOT SHIFTING SMOOTHLY. THE DERAILLEUR MAY BE OUT OF ADJUSTMENT AND THE CHAIN COULD JAM, CAUSING YOU TO LOSE CONTROL AND FALL.

WARNING! DO NOT FORCE THE SHIFT LEVERS. SHIFT ONLY WHEN PEDALING FORWARD AND WITHOUT STRONG FORCE. DO NOT BACKPEDAL. BACKPEDALING AND SHIFTING WHILE NOT PEDALING CAN DAMAGE THE SPROCKETS AND STRETCH THE CABLE WIRE.

E. What If It Won’t Shift Gears?

If moving the shift control one click repeatedly fails to result in a smooth shift to the next gear chances are that the mechanism is out of adjustment. Take the bike to your bike mechanic to have it adjusted.

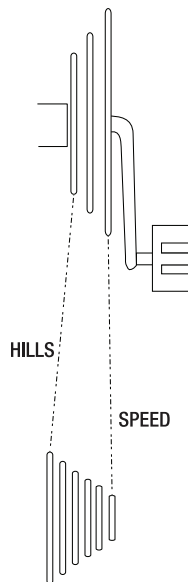

TUOTEG™ LCD DISPLAY

OPERATING INSTRUCTIONS



POWER ON/OFF

To turn the system on, press the Power button  for three seconds. The screen will display all contents then switch normal working mode and the system controller will be activated. Press and hold again to power the system down. The system will automatically turn off after 10 minutes of idle time.

SPEED DISPLAY

By default, the system will show the current speed of the bike (SPEED).

To view the Maximum Speed (MAX) or Average Speed (AVG), long-press  and .



TUOTEG™ LCD DISPLAY

OPERATING INSTRUCTIONS

DATA DISPLAY

With the system on, pressing the Power Button  repeatedly will toggle between which data is displayed.

Odometer (ODO) and Trip Distance (TRIP) display your total mileage logged on the system and the distance traveled for the current trip.



Odometer



Trip Distance

Ride Time (TM) displays the total amount of time for the current trip.

Error Code (REE) displays when something is wrong with the system.
See Table 1 below.



Ride Time



Error

Table 1: Error Code Definition

Code (Decimal)	Signification
0	Normal
6	Low Battery Level
7	Motor Error
8	Throttle Error
9	Controller Error
10	UART Receive Error
11	UART Receive Error

TUOTEG™ LCD DISPLAY OPERATING INSTRUCTIONS

If you have an error code displayed on your system, please contact the TUOTEG Technical Support Team at 1-800-538-0029.

PEDAL ASSIST LEVEL

The Up or Down Button  /  changes the level of assistance provided by the system from 1-5.



OPERATING PROCEDURES

START YOUR E-BIKE:

1. Turn the battery on.
For CNQR and XPLR models, this is near the top of the battery / front of the bike.
For CVRT, turn the key into the 'On' position.
For CRZR, the on switch is located at the rear on the bottom of the battery case.
2. Turn on the display by holding the power button  for 3 seconds
3. Hold the brake lever when not on the bike to ensure the system does not engage.
▲ WARNING: Do not push the throttle lever or spin the pedals while not on the bike.
4. Once you begin riding, increase or decrease the motor assist by pressing the up and down arrows  / . There are 5 total levels of assist. The assistance will stop at lower speeds at lower levels. The maximum speed the system will assist to is 20 MPH.

NOTES DURING RIDING:

Frequent braking and again accelerating will deplete the battery faster. The motor will stop assisting once you stop pedaling. Your ebike's rated maximum load is 220 lb (100kg) including the rider, do not overload.

▲ WARNING: When stopped, reduce the assist level to '0' or turn off the battery in case the crank arm keeps turning while you push the bike. The motor would start suddenly which may lead to an accident.

FOR YOUR SAFETY, PLEASE MAINTAIN AND CLEAN YOUR EBIKE REGULARLY.

OPERATING PROCEDURES

HOW TO CHARGE THE BATTERY:

Park the ebike where an electric socket is available. With the battery off, insert the round charging plug of the charger into the charging hole on your ebike frame, and then plug the other end into a standard 100-240 volt AC outlet. When the light on charger turns red, the battery is charging. When the charging light turns green, the charging is finished and the battery is fully charged.

It takes about 5-6 hours to fully charge an empty battery. When the charging is finished, unplug the electrical plug first, then unplug the charging plug connected to the ebike, in that sequence.

This is a lithium battery, it has no memory effect, so you can charge or discharge anytime. In normal circumstances, the battery can be used for more than 2 years.

NOTES FOR CHARGING:

- Make sure to charge your bike before rides. Do not attempt to ride with too little power available.
- Please charge the battery in a dry, well-ventilated area with adequate power supply.
- To protect the battery, only use the original charger. Please do not use this charger to charge other ebike batteries.
- The charger contains high-voltage circuit. Do not dismantle it.
- Only charge the battery while it is switched off.
- Please avoid any liquid or foreign substance from entering the charger. Please protect the charger from impact. Never let it drop or drop objects onto it.
- Do not cover the charger when it is charging.
- Please keep and use our charger in a dry and ventilated area.
- During charging, if the charger emits any smell or it becomes excessively hot, please stop charging and call the TUOTEG Technical Support Team at 800-538-0029 or email TechSupport@TUOTEG.com.

OPERATING PROCEDURES

SHIFTING GEARS:

Your bike is equipped with multiple speeds. The first gear is for easier and uphill pedaling, and the last gear is for maximum speed on level or downhill terrain. Change gears only while pedaling. The rear wheel contains seven chain sprockets. When the chain is around the largest sprocket, you are in 1st gear, or the lowest gear. The high gear will have the derailleur positioned so that the chain is directed around the smallest gear. Every position on the gear selector should cause a gear change. Adjustments require fine tuning and should only be made by a qualified technician.

NOTE: Avoid changing gears very rapidly from first gear to the last gear or vice versa. If you change multiple gears too quickly, you could have the chain come off the front sprocket.

⚠ WARNING: ONLY SHIFT GEARS WHILE PEDALING! Shifting gears while using only the motor assist can cause the chain to become loose or come off the bike.

MAINTENANCE/REPAIR

Correct routine maintenance of your new bike will ensure a longer life for your bike and a safer ride for you.

Every time you ride your bike, its condition changes. The more you ride, the more frequently maintenance will be required. We recommend you spend a little time on regular maintenance tasks. The following schedules will assist you in knowing what tasks need to be performed and how often. If you have any doubts about your abilities to accomplish these tasks, we recommend you take your bike to a professional bicycle mechanic periodically to have them done.

Schedule 1 - Lubrication

Frequency	Component	Lubricant	How to Lubricate
Weekly	Chain	Chain lube or light oil	Brush on or squirt
	Derailleur wheels	Chain lube or light oil	Brush on or squirt
Monthly	Derailleurs	Oil	Oil can
	Brake calipers	Oil	3 drops from oil can
	Brake levers	Oil	2 drops from oil can
	Shift levers	Lithium based grease	Disassemble
Every Six Months	Freewheel	Oil	2 drops from oil can
	Brake cables	Lithium based grease	Disassemble
Yearly	Bottom bracket	Lithium based grease	Bicycle Mechanic
	Pedals	Lithium based grease	Disassemble
	Derailleur cables	Lithium based grease	Disassemble
	Wheel bearings	Lithium based grease	Bicycle Mechanic
	Headset	Lithium based grease	Bicycle Mechanic
	Seat pillar	Lithium based grease	Disassemble
		Lithium based grease	

Note: The frequency of maintenance should increase with use in wet or dusty conditions.

**Do not over lubricate - remove excess lubricant to prevent dirt build up.
Never use a degreaser to lubricate your chain (WD-40™)**



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

SERVICE CHECKLIST:

Frequency	Task
Before every ride	Check wheel and pedal tightness Check tire pressure Check brake operation Check wheels for loose spokes, loose axle nuts or quick release Make sure all fasteners are tightened securely
After every ride	Quick wipe down with damp cloth
Weekly	Lubrication as per schedule 1
Monthly	Lubrication as per schedule 1 Check derailleur adjustment Check brake adjustment Check brake and gear cable adjustment Check tire wear and pressure Check wheels are true and spokes tight Check hub, head set and crank bearings for looseness Check pedals are tight Check handlebars are tight Check seat and seat post are tight and comfortably adjusted Check frame and fork for trueness Check all nuts and bolts are tight
Every six months	Lubrication as per schedule 1 Check all points as per monthly service Check and replace brake pads, if required Check chain for excess play or wear
Yearly	Lubrication as per schedule 1




**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

TOOLS REQUIRED FOR MAINTENANCE:




1. Open ended wrench or box wrenches: 8mm, 9mm, 10mm, 12mm, 13mm, 14mm, 15mm
2. Open end or pedal wrench 15mm
3. Allen key wrenches: 4mm, 5mm, 6mm, 8mm
4. Adjustable wrench
6. Standard Phillips head screwdriver
7. Standard slip joint pliers
8. Tire pump
9. Tube repair kit
10. Tire levers

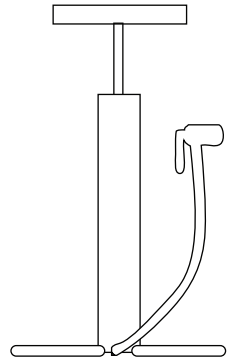

TRAVEL TOOLS:

We suggest you take the following items with you when going on a long bike ride. Tools should be fully secured in a sturdy bag or container attached to the seat or frame of the unit during travel:

1. Spare tube
2. Patch kit
3. Pump
4. Tire levers
5. Multi-tool
6. Cell phone



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

WHEEL INSPECTION:

It is most important that wheels are kept in top condition. Properly maintaining your bicycle's wheels will help braking performance and stability when riding. Be aware of the following potential problems:

- **Dirty or greasy rims:**

Caution: These can render your brakes ineffective. Do not clean them with oily or greasy materials. When cleaning, use a clean rag or wash with soapy water, rinse and air dry. Don't ride while they're wet. When lubricating your bicycle, don't get oil on the rim braking surfaces.

- **Wheels not straight:**

Lift each wheel off the ground and spin them to see if they are crooked or out of true. If wheels are not straight, they will need to be adjusted. This is quite difficult and is best left to a professional bicycle mechanic.

- **Broken or loose spokes:**

Check that all spokes are tight and that none are missing or damaged.

Caution: Such damage can result in severe instability and possibly an accident if not corrected. Again, spoke repairs are best handled by a mechanic.

- **Loose hub bearings:**

Lift each wheel off the ground and try to move the wheel from side to side.

Caution: If there is movement between the axle and the hub, do not ride the bicycle. Adjustment is required.

- **Axle nuts:**

Check that these are tight before each ride.



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

TIRE INSPECTION:

Tires must be maintained properly to ensure road holding and stability. Check the following areas:

- **Inflation:**

Ensure tires are inflated to the pressure indicated on the sidewall of the tire. Improper inflation is the biggest cause of tire failure. Due to the slightly porous nature of bicycle inner tubes, it is normal for your tires to lose pressure over time. For this reason, it is critically important to maintain the proper tire inflation on your bike. **Caution: Use a hand or foot pump to inflate tires. NEVER inflate tires with an air compressor at a gas station. This can cause the tubes to over inflate and blowout.**

- **Bead Seating:**

When inflating or refitting the tire, make sure that the bead is properly seated in the rim.

- **Tread:**

Check that the tread shows no signs of excessive wear or flat spots, and that there are no cuts or other damage.

CAUTION: Excessively worn or damaged tires should be replaced.

- **Valves:**

Make sure valve caps are fitted and that valves are free from dirt. A slow leak caused by the entry of dirt can lead to a flat tire and possibly a dangerous situation.

RECOMMENDED TIRE PRESSURES:

The recommended pressure is molded on the sidewall of your bicycle tires.



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

HOW TO FIX A FLAT TIRE: If you need to repair a tire, follow these steps:

1. Remove the wheel from the bicycle.
2. Deflate the tire completely via the valve. Loosen the tire bead by pushing it inward all the way around.
3. Press one side of the tire bead up over the edge of the rim. Note: Use tire levers, not a screwdriver, otherwise you may damage the rim.
4. Remove the tube, leaving the tire on the rim.
5. Locate the leaks and patch using a tube repair kit or replace the tube. Note: Ensure that the replacement tube size matches the size stated on the tire sidewall and that the valve is the correct type for your bicycle.
6. Match the position of the leak in the tube with the tire to locate the possible cause and mark the location on the tire.
7. Remove the tire completely and inspect for a nail, glass, etc. and remove if located. Also inspect the inside of the rim to ensure there are no protruding spokes, rust or other potential causes. Replace the rim tape which covers the spoke ends.
8. Remount one side of the tire onto the rim.
9. **Using a hand pump**, inflate the tube just enough to give it some shape.
10. Place the valve stem through the hole in the rim and work the tube into the tire. NOTE: Do not let it twist.
11. Using your hands only, remount the other side of the tire by pushing the edge toward the center of the rim. Start on either side of the valve and work around the rim.
12. Before the tire is completely mounted, push the valve up into the rim to make sure the tire can sit squarely in position.
13. Fit the rest of the tire, rolling the last, most difficult part on using your thumbs. NOTE: Avoid using tire levers as these can easily puncture the tube or damage the tire.
14. Check that the tube is not caught between the rim and the tire bead at any point.
15. **Using a hand pump**, inflate the tube until the tire begins to take shape. Check that the tire bead is evenly seated all the way around the rim. When properly seated, fully inflate the tire to the pressure marked on the sidewall.
16. Replace the wheel into the frame checking that all gears, brakes and quick release levers are properly adjusted.



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**




MAINTENANCE/REPAIR

DERAILLEUR SYSTEMS:

The derailleur system consists of the rear derailleur, the shift lever, and the derailleur control cables, all of which must function correctly for smooth gear shifting to occur. There are several different types of derailleur systems but all operate using similar principles. Your new bicycle is fitted with an "index" system (e.g. SIS) which links each different gear position to a positive click mechanism in the shifter, and makes shifting simple and precise.

INSPECTION:

The operation of the derailleur system should be checked at the start of each ride and thoroughly checked at least every month. Check the operation of the derailleur first. The rear derailleur should shift the chain cleanly from one cog to the next without hesitation. Each notched position in the shifter equates to a new gear position. After shifting, the rear derailleur should not rub on the chain. The derailleur should never cause the chain to fall off the inner or outer freewheel cogs. Derailleur control cables are a critical component that must be well maintained for accurate shifting performance. Check them for any sign of rust, fraying, kinks, broken strands, and any damage to the cable housing. If you find any problems, the cables or other involved components should be evaluated as it may need replacing before you ride.

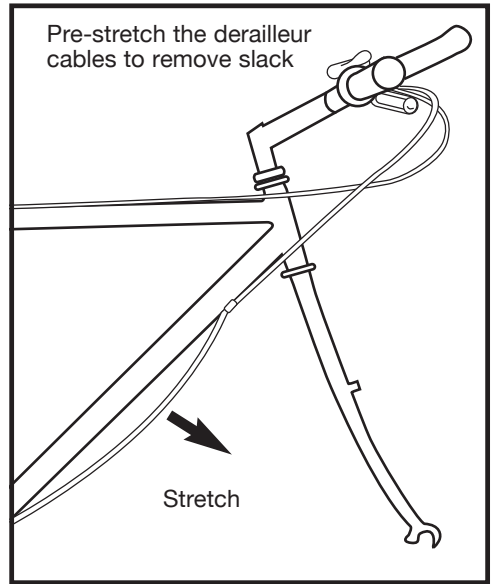

**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**




MAINTENANCE/REPAIR

REAR DERAILLEUR ADJUSTMENT:

The Low Gear Adjustment Screw (A) determines how far the rear derailleur will travel toward the wheel of the bicycle, while the High Gear Adjustment Screw (B) determines how far the cage will travel toward the frame.

1. Shift the rear shifter to the largest number indicated, disconnect the rear derailleur cable from the cable anchor bolt and place the chain on the smallest sprocket.
2. Adjust the High Gear Adjustment Screw (B) so the chain and the smallest sprocket are lined up vertically. Remove any slack in the cable by pulling it taut, then re-connect the cable and tighten the cable anchor bolt securely.
3. Some derailleurs have an adjusting barrel. Use the adjusting barrel and turn clockwise to move the derailleur outboard - away from the wheel - while turning it counter-clockwise will direct the chain inboard - towards the wheel.
4. Shift the chain onto the largest sprocket; adjust the Low Gear Adjustment Screw (A) so the chain and the largest cog are lined up vertically. If you are unable to get the chain to the largest cog, turning the Low Gear Adjustment Screw (A) counter-clockwise will enable the chain to move towards the wheel.
5. Shift through the gears ensuring each gear is achieved quietly and without hesitation.

NOTE: It may take several adjustments to achieve the desired positioning. Please refer to the troubleshooting section for more assistance. Check to be sure how the components on your bike function.

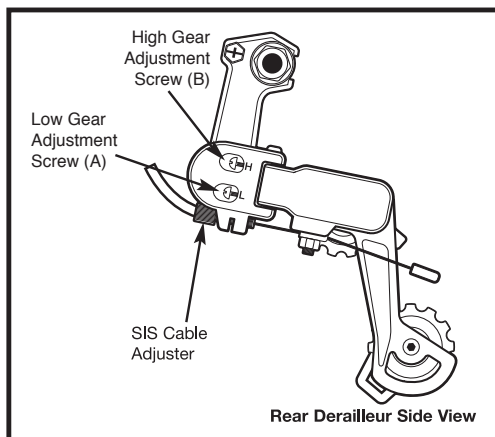


**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR


DERAILLEUR LUBRICATION:

All the pivoting points of the derailleur should be lubricated with light oil at least every month. Be sure to wipe off any excess oil to prevent attraction of dirt into the mechanisms. The shifting cables should be cleaned and re-coated with a thin layer of grease every six months, or whenever new cables are being installed.

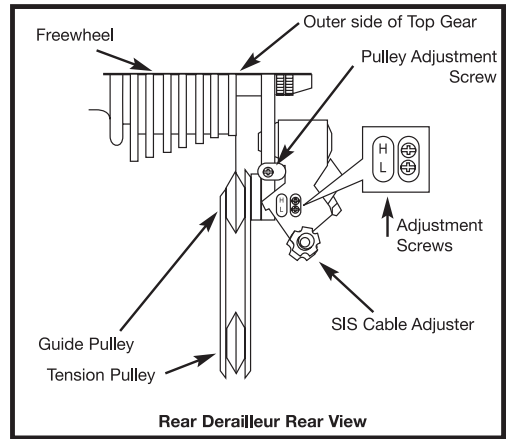

FREEWHEEL INSPECTION:

Like the chain, the freewheel must be kept clean and well lubricated using light oil in small quantities. If the chain has become worn and needs replacing, then it is likely that the freewheel will also have become worn and should be carefully checked and also be replaced. Take the chain off the freewheel and rotate it with your hand. If you hear a grinding noise or the freewheel stops suddenly after spinning it, it may need adjustment or replacement. Such action is beyond the scope of this manual and you should consult a professional bicycle mechanic.

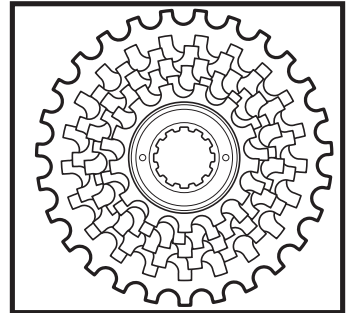

**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

PEDAL INSPECTION:

Pedals should be inspected every month, taking note of the following areas:

- Check that the pedals are tightened securely against the crank arm. If pedals are allowed to become loose, they will not only be dangerous to the rider but will also cause irreparable damage to the mating threads of the cranks.
- Check that pedal bearings are properly functioning. Move the pedals up and down, and right to left, and also rotate them by hand. If you detect any looseness or roughness in the pedal bearings then lubrication or replacement is required. Check your pedals to see if adjustment is possible to correct the looseness.
- Ensure that the front and rear pedal reflectors on each pedal are clean, not cracked, and securely fitted.

⚠ WARNING! Never ride with loose pedals. Improperly installed or tightened pedals can work loose, damaging the bicycle and causing possible serious injury or death to the rider.

⚠ Always wear solid, well-constructed shoes while riding.



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

PEDAL LUBRICATION AND ADJUSTMENT:

Many pedals cannot be disassembled to allow access to the internal bearings and axle. However, it is usually possible to inject a little oil onto the inside bearings, and this should be done every six months. If the pedal is the type that can be fully disassembled, then the bearings should be removed, cleaned and greased every six to twelve months. Because of the wide variety of pedal types and their internal complexity, disassembly procedures are beyond the scope of this manual and further assistance should be sought from a professional bicycle mechanic.

PEDAL ATTACHMENT:

NOTE: The right and left pedals of a bicycle each have a different thread and are not interchangeable. Never force a pedal into the incorrect crank arm. Check for the right (R) and left (L) letters on each pedal bolt end. Not all crank arms are marked but the right pedal crank arm is on the right side of the bike with a rider in normal riding position and the left crank arm is located on the left side of the bike. Match the appropriate pedal to each crank (right to right and left to left) for assembly. Insert the correct pedal into the crank arm and begin to turn the thread with your fingers only. When the axle is screwed in substantially all the way then securely tighten using a 15mm narrow open-ended wrench so that the shoulder of the pedal spindle is securely tightened against the crank arm. If removing a pedal, remember that the right pedal axle must be turned counter clockwise, i.e. the reverse of when fitting.

If replacing the original pedals with a new set, make sure the size and the axle thread is compatible with the cranks on your bicycle.

NOTE: Never try and force a pedal with the wrong thread size into a bicycle crank. If the pedal is too loose or too tight, it is the wrong pedal and might come loose in use.




**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

CHAIN INSPECTION:

The chain on your bicycle must be kept clean, rust free and frequently lubricated in order to have the best possible performance when riding and extend its life as long as possible. It will require replacement if it stretches, wears, breaks, or causes inefficient gear shifting due to excessive dirt or debris embedded in the chain. Make sure that there are no stiff links; they must all move freely to seat and shift properly.

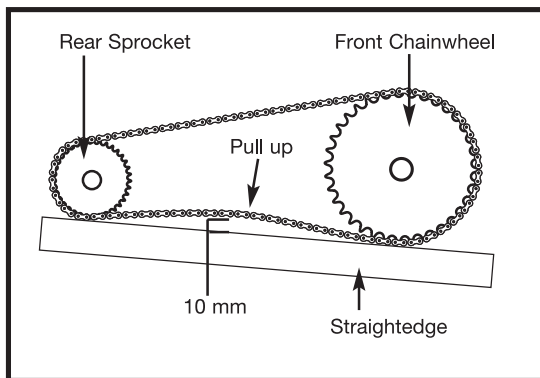

CHAIN LUBRICATION:

The chain should be lubricated with light oil at least every month, or after use in wet, muddy, or dusty conditions. Take care to clean the chain of debris before lubrication. After lubrication, wipe off excess oil. **NOTE:** Do not get oil on the tires or braking surfaces.

CHAIN ADJUSTMENT AND REPLACEMENT:

On derailleur geared bicycles, the rear derailleur automatically tensions the chain. To adjust the chain:

1. Loosen the rear axle nuts (and coaster brake arm clip if fitted) and move the wheel forward to loosen, or backward to tighten the chain, in the frame.
2. When correctly adjusted, the chain should have approximately 10mm of vertical movement when checked in the center between the chainwheel and rear sprocket.

Chains require a special tool to fit and remove damaged chain links, or to change the length. **We recommend that you consult a professional bicycle mechanic to replace or change the length of your chain. They will have the special tools required to perform the repairs correctly.**



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

TUOTEG™ BATTERY AND CHARGER CARE:

The charger will charge a fully depleted battery in 5-6 hours. The indicator light on the charger will be red / orange when the discharged battery is charging. The indicator light will turn green when the battery is fully charged. Avoid subjecting the battery to high temperatures, such as direct sun, for prolonged periods of time.

Recharge the battery before it becomes completely discharged. Completely discharging will reduce the numbers of recharging cycles during the battery's life and limit the capacity. Never store the battery in a discharged state.

After much use, your battery's charge-holding capacity will decrease. If you find that your battery does not hold a sufficient charge, please call the TUOTEG Technical Support Team at 800-538-0029 or email TechSupport@TUOTEG.com.

Some owners find it convenient to have 2 batteries to avoid being out of service for 5-6 hours. If the battery will not be used for an extended period of time, charge it fully and recharge it every 3-6 months. Store it in a cool, dry place. Your battery is engineered with precision for high capacity and a long, useful life. If you experience unusual sounds or odors coming from the charger or the battery, unplug the charger and battery immediately and contact customer service.

Clean visible oxidation from the plugs and metallic parts. Change to a different outlet if the plug becomes hot during charging. Over-heating from a battery's ability to hold a full charge may lead to a short circuit and damage your charger, battery, and unit.



CRZR Rack
Battery



XPLR & CNQR-
Downtube
Battery



CVRT
Seat Tube
Battery



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

TUOTEG™ CHARGER:

Included with your new ebike is a lithium ion battery, along with a charger, which plugs into a standard household electric receptacle.

A lithium ion battery requires specially designed chargers. You should never charge your battery with a substitute charger that is not designed for this use. Use of an unsuitable charger to charge a lithium ion battery could result in over-heating, fire or even explosion.

- Recharge battery after every use.
- Do not disassemble or alter the battery or battery charger.
- Do not place the battery near fire or corrosive substances.
- Do not allow any liquids on or inside the battery/charger.
- Do not expose the battery/charger to extreme weather conditions.
- Do not operate the battery/charger if damaged.
- Recharge the battery only with a charger specified by the manufacturer.
- Do not use the battery/charger for any use other than its intended purpose.
- Only use the battery/charger on approved products.



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



MAINTENANCE/REPAIR

APPEARANCE CARE:

Periodically clean your electric bike with a damp cloth. Avoid spraying the ebike with a water hose to avoid electrical issues. Store your ebike in a dry shelter area away from direct sunlight and wet or damp environment. It is also recommended to apply chain lube to the drive-train of your ebike when you clean it or wipe it down to keep it in good running condition.

NOTE:

- Washing your ebike with a hose or high pressure hose is not possible, because it will cause failure or even accidents caused by damage of electronic components and circuits. Do not rinse the electrical parts of your ebike, use a moist cloth only.
- Please use natural detergents and use a rag to clean its surface gently, finally clean the bike with a dry cloth.



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



TROUBLESHOOTING

Problem	Possible Cause	Remedy
Gear shifts not working properly	- Derailleur cables sticking/ stretched/damaged - Rear derailleur not adjusted properly - Indexed shifting not adjusted properly	- Lubricate/tighten/clean replace cables - Adjust derailleur - Adjust indexing - Seek advice from your dealer
Slipping chain	- Excessively worn/chipped chain-ring or freewheel sprocket teeth - Chain worn/stretched - Stiff link in chain - Non compatible chain/ chainring/freewheel	- Replace chainring and sprockets - Replace chain - Lubricate or replace master link - Seek advice from your dealer
Chain jumping off freewheel sprocket or chainring	- Chainring out of true - Chainring loose - Chainring teeth bent or broken - Rear derailleur side-to-side travel out of adjustment	- Re-true if possible, or replace - Tighten mounting bolts - Repair or replace chainring/ set - Adjust derailleur travel
Constant clicking noises when pedaling	- Stiff chain link - Loose pedal axle/bearings - Loose bottom bracket axle/ bearings - Bent bottom bracket or pedal axle - Loose crankset	- Lubricate chain/adjust chain link - Adjust bearings/axle nut - Adjust bottom bracket - Replace bottom bracket axle or pedals - Tighten crank bolts
Grinding noise when pedaling	- Pedal bearings too tight - Bottom bracket bearings too tight - Chain fouling derailleurs - Derailleur jockey wheels dirty/binding	- Adjust bearings - Adjust bearings - Adjust chain line - Clean and lubricate jockey wheels



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



TROUBLESHOOTING

Problem	Possible Cause	Remedy
Freewheel does not rotate	- Freewheel internal pawl pins are jammed	- Lubricate. If problem persists, replace freewheel
Brakes not working effectively	- Brake blocks worn down - Brake blocks/rim greasy, wet or dirty - Brake cables are binding/ stretched/damaged - Brake levers are binding - Brakes out of adjustment	- Replace brake blocks - Clean blocks and rim - Clean/adjust/replace cables - Adjust brake levers - Center brakes
When applying the brakes they squeal/ squeak	- Brake blocks worn down - Brake block toe-in incorrect - Brake blocks/rim dirty or wet - Brake arms loose	- Replace blocks - Correct block toe-in - Clean blocks and rim - Tighten mounting bolts
Knocking or shuddering when applying brakes	- Bulge in the rim or rim out of true - Brake mounting bolts loose - Brakes out of adjustment - Fork loose in head tube	- True wheel or take to a bike shop for repair - Tighten bolts - Center brakes and/or adjust brakeblock toe-in - Tighten headset
Wobbling Wheel	- Axle broken - Wheel out of true - Hub comes loose - Headset binding - Hub bearings collapsed - QR mechanism loose	- Replace axle - True wheel - Adjust hub bearings - Adjust headset - Replace bearings - Adjust QR mechanism



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



TROUBLESHOOTING

Problem	Possible Cause	Remedy
Steering not accurate	- Wheels not aligned in frame - Headset loose or binding - Front forks or frame bent - Stem wedge bolt not tight	- Align wheels correctly - Adjust/tighten headset - Take bike to a bike shop for possible frame realignment - Tighten stem bolt
Frequent punctures	- Inner tube old or faulty - Tire tread/casing worn - Tire unsuited to rim - Tire not checked after previous puncture - Tire pressure too low - Spoke protruding into rim	- Replace Inner tube - Replace tire - Replace with correct tire - Remove sharp object embedded in tire - Correct tire pressure - File down spoke
Motor is not working	- Run out of battery - Controller is broken - Motor was too hot	- Charge the battery - Repair or replace motor or battery - Wait a few minutes
Motor works intermittently	- The connector of motor is loose - Voltage of the battery is too low, the controller starts low-voltage protection	- Reconnect the motor - Charge the battery or replace the battery
Motor is powerless	- Line resistance is too huge - Voltage of the battery is too low - Motor is damaged	- Check and repair the circuit - Charge the battery or replace with a new one - Replace the motor



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



TROUBLESHOOTING

Problem	Possible Cause	Remedy
Short time of charge and discharge of battery	- Decline of battery capacity	- Replace the battery
The light on charger is not working	- Fuse for input in charger is broken - Loose power supply at the socket - The connector of indicator light is loose - The indicator light is broken	- Change fuse - Check the outlet, make sure power is there - Reconnect - Replace indicator light
The green light is not lit after 5 hours of charging	- The charging voltage is too high - Battery is damaged - The indicator light is broken	- Replace the charger - Replace the battery - Replace indicator light
Red and green lights go off quickly when electricity is connected	- Charger coil is shorted - Rectifier tube is broken	- Check the value of resistance - Replace or repair



**CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM
AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM
OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY
QUESTIONS ON REPAIRS OR MAINTENANCE.**



LIMITED WARRANTY

TUOTEG LIMITED WARRANTY TERMS

All TUOTEG Bikes ("TUOTEG") ebikes (the "ebike"), and their individual components (as defined herein), are protected against all manufacturing defects in material or workmanship for one (1) year after the date of a qualifying purchase (the "Warranty Period"). This Limited Warranty is only applicable to United States ebike purchases and in accordance with the following terms:

- This limited warranty applies only to the original owner of an ebike purchased from TUOTEG's online store or an authorized TUOTEG retailer. The Warranty Period begins upon your receipt of the ebike and shall end immediately at the end of the warranty period OR upon transfer of the bicycle to another owner- under no circumstances shall the Limited Warranty apply to any subsequent owner or other transferee of the ebike.
- The Limited Warranty is expressly limited to the replacement of a defective battery, frame, fork, stem, handlebar, headset, seat post, saddle, brakes, bottom bracket, crank set, pedals, rims, wheel hub, freewheel, cassette, derailleur, shifter, motor, throttle, controller, wiring harness, LCD display, kickstand, reflectors and hardware.
- The above components are warrantied to be free of defects in materials and/or workmanship during the one-year warranty period.

This Limited Warranty Does Not Cover:

- Normal wear and tear of any of the components listed above.
- Typical consumables or normal wear and tear parts: tires, tubes, brake pads, disc brake rotors, brake or derailleur cables and housing, grips, chain, chainrings and spokes.
- Damage or defects to components resulting from improper installation, failure to follow instructions in the owner's manual, accidents, misuse, neglect, abuse, commercial use, alterations, modification, installation of parts or accessories not originally intended or compatible with the ebike as sold, operator error, water damage, extreme riding, stunt riding, or improper follow-up maintenance.
- For the avoidance of doubt, TUOTEG will not be liable and/or responsible for any damage, failure or loss caused by any unauthorized service or use of unauthorized parts.
- The Battery is not warrantied from damage resulting from power surges, use of an improper charger, improper maintenance or other such misuse, normal wear or water damage.
- Any product sold by TUOTEG that is not an ebike.

LIMITED WARRANTY

DETERMINING WHETHER DAMAGE OR DEFECT TO AN EBIKE OR COMPONENT IS PROTECTED BY THIS LIMITED WARRANTY SHALL BE AT THE SOLE DISCRETION OF TUOTEG.

Shipping Damage:

Damage to a component during shipping is not covered by this Limited Warranty, but TUOTEG will replace such damaged components if you:

- Notify TUOTEG of a component damaged in the shipping process within thirty (30) days of your receipt of the ebike;
- Provide TUOTEG with a dated picture of the damaged component;
- Return all original packaging and paperwork included with the ebike; and
- Note any immediately recognizable damage on the shipper's Bill of Lading prior to signing off on the shipment.

Shipping damage claims are very time sensitive and it is your responsibility to immediately inspect the ebike for damage upon receipt.

If you choose to set up your own independent shipping method, such as use of a freight forwarder or other similar service, TUOTEG will not replace any components damaged during such shipping method.

WARRANTY CLAIMS PROCESS:

TUOTEG WILL NOT REPLACE ANY COMPONENT UNDER THIS LIMITED WARRANTY WITHOUT FIRST SEEING PHOTOS OR VIDEO OF THE DAMAGED COMPONENT.

To exercise your right to receive a replacement for a component under this Limited Warranty, you must:

- Contact the TUOTEG Technical Support team by email at support@TUOTEG.com or by phone at 1-800-538-0029. The Technical Support team will initially work with you on the problem with your ebike to identify potential simple fixes.
- If the Technical Support team determines that a component must be replaced, they will provide you with a set of instructions for returning the defective component and receiving the replacement.
- After you receive the replacement component, the Technical Support team will also assist in determining how to replace or install the new component into your ebike.
- You will be responsible for shipping costs associated with returning a component, unless TUOTEG agrees in writing to pay for such shipping costs. Replacement components under this Limited Warranty shall only be shipped to the address of the original purchaser.

LIMITED WARRANTY

THE REMEDIES DESCRIBED IN THE WARRANTY CLAIMS PROCESS ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND TUOTEG’S ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. TUOTEG’S LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE EBIKE, NOR SHALL TUOTEG UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

TO THE EXTENT PERMISSIBLE UNDER APPLICABLE LAW, TUOTEG DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE FOR THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.



NOTE: BEFORE TRANSPORTING THE BIKE AND/OR BATTERY, CALL THE TUOTEG TECHNICAL SUPPORT TEAM AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM

IMPORTANT INFORMATION

1. The battery's performance can be effected by its environment. Generally speaking, battery's discharge performance is better in a higher temperature. Electric power will drop by more than 1/3 when the temperature is below 32°F (0°C). Thus, the ebike's riding distance per charge will become shorter in winter or cold areas. It returns to normal or optimal distance per charge when the temperature is higher than 68°F (20°C).
2. Do not put any metal objects in charge hole or battery circuit, it may cause short circuit or start a fire.
3. Do not dismantle or change any parts without authorization of the manufacturer. Any loss caused by inappropriate use, misuse or dismantling can cause dangers to the rider where manufacturer cannot be liable. Be reminded ebikes warranty can be affected, too. In general, if you think there might be any problem with your ebike, please call the TUOTEG Technical Support Team at 800-538-0029 or email TechSupport@TUOTEG.com.
3. Speeding especially on downhill roads can be dangerous. Slamming brakes at high speed might cause the bike to skid and lead to a road accident. Do not use the front brake to hard, it can cause you to fall forward over the handlebars and can severely hurt you.
4. Oil in the brake pad's or rim's surface can or will put brakes out of order. This can cause danger and accident. Beware of this.
5. Do not hang anything on the handlebar while riding. Verify the monitor display and any accessories are securely attached to avoid failure or loss during operation.
6. This ebike is fit to be ridden by one person only, do not carry a passenger.
7. To protect your battery and avoid danger, do not connect battery's positive and negative side with one another or any conductor.
8. Adjust the brake caliper position each month, change the brake pad each half year or one year to keep the brake function in good condition.
9. The front wheel is fixed with the fork by quick-release lever. Make sure the handle can be pressed tight. If not tight, unscrew the nut then press it again until the handle is tight after lock. Please regularly check the rims of bike, especially for the caliper brake, that avoid the regularly using brakes causing the rim edge thinning and affect the strength of the rim, resulting the tries blowout and result the user's injury.
10. Do not ride while intoxicated. Do not ride when taking medicine or when you are not feeling well.



CAUTION: CALL THE TUOTEG TECHNICAL SUPPORT TEAM AT 800-538-0029 OR EMAIL TECHSUPPORT@TUOTEG.COM OR CONSULT A PROFESSIONAL BICYCLE MECHANIC WITH ANY QUESTIONS ON REPAIRS OR MAINTENANCE.



